


 HONDA INSTALLATION INSTRUCTIONS	Accessory	Application	Publications No.
	CD CHANGER ATTACHMENT KIT	2000 PRELUDE	All 21001
			Issue Date
			SEP 1999

 
PARTS LIST

6-Disc CD Changer Attachment Kit:
P/N 08B11-S30-100


CD Changer bracket

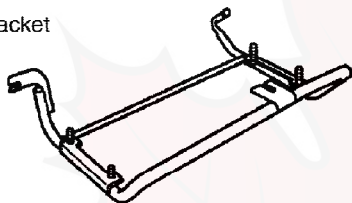

Left bracket



Right bracket

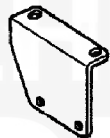 

4 Nuts, 6 mm



2 Washer-bolts,
6 x 16 mm



3 Spring nuts



7 Wire ties



7 Cushion tapes



EPT seals



4 Washer-screws,
4 x 8 mm



Bus cable



Washer-bolt,
6 x 25 mm




Washer, 8 mm



CD Changer (sold separately):
P/N 08A06-181-420


CD Changer trunk unit

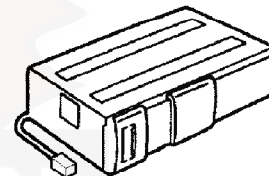

Owner's Manual




CD Magazine

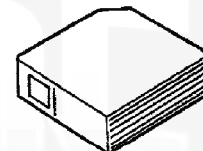

8 Washer-screws,
4 x 6 mm
(not used)



2 Side brackets
(not used)

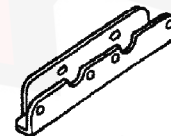

Adhesive seal sheet




Locking covers



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
Flat-tip screwdriver
10 mm Socket
Ratchet
10 mm Combination wrench
Shop towel
Awl

Illustration of CD Changer Installed on the Vehicle

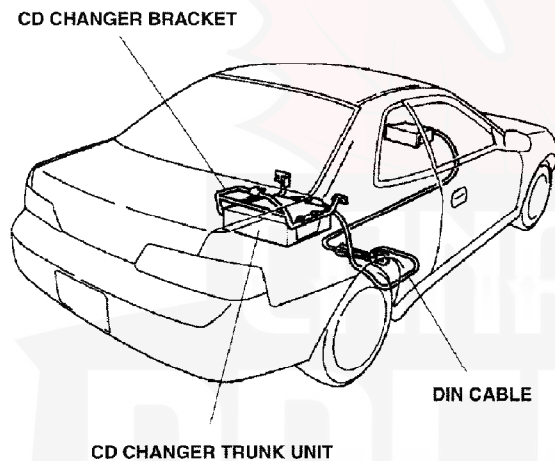


INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your car. These procedures should not be attempted by "do-it-yourselfers."

Routing the Bus Cable


1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.
3. Remove the cover from the bottom of the front console by releasing the three clips and a retaining tab. Repeat on the other side.

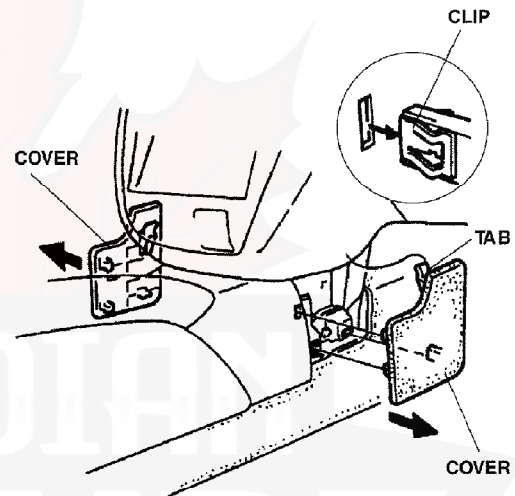


4. *On the M/T Model only*, remove the shift knob:
 - While pressing down on the two retaining tabs, pull down the boot.
 - Remove the knob by turning it counterclockwise.

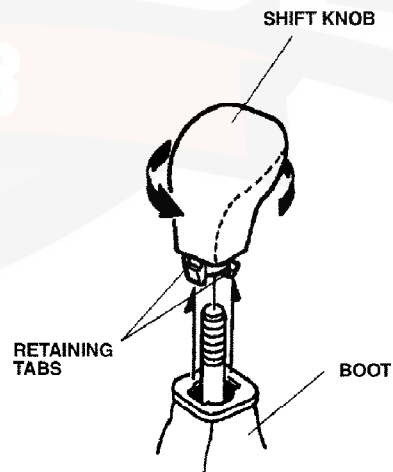


5. Remove the center console by removing the eight self-tapping screws, and disconnecting the connector.

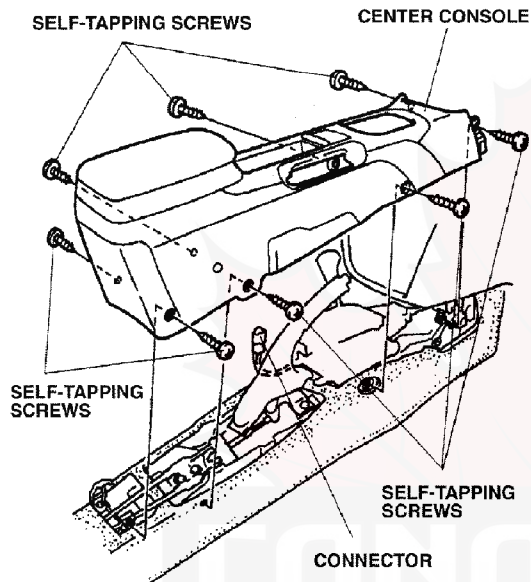


7. Remove the audio unit by removing the four self-tapping screws, and disconnecting the 16-pin connector and the antenna lead.

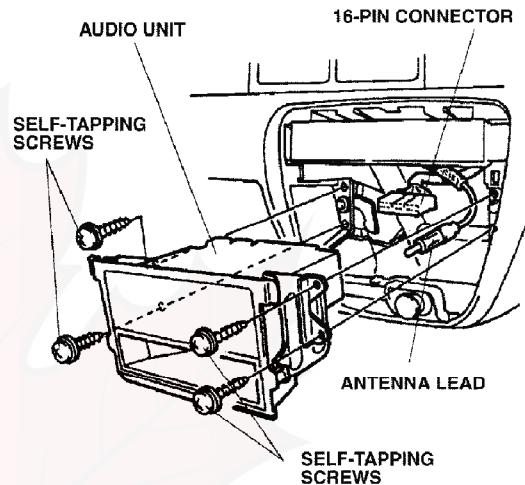


6. Using a shop towel around a flat-tip screwdriver, release the eight clips securing the front panel, and remove it. Take care not to damage the retaining clips.

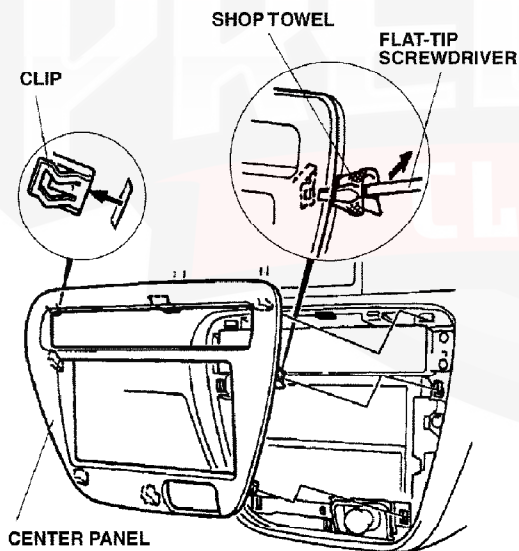


8. Release the two hooks, and remove the rear seat cushion by first pulling up on the front end and then sliding it toward you.

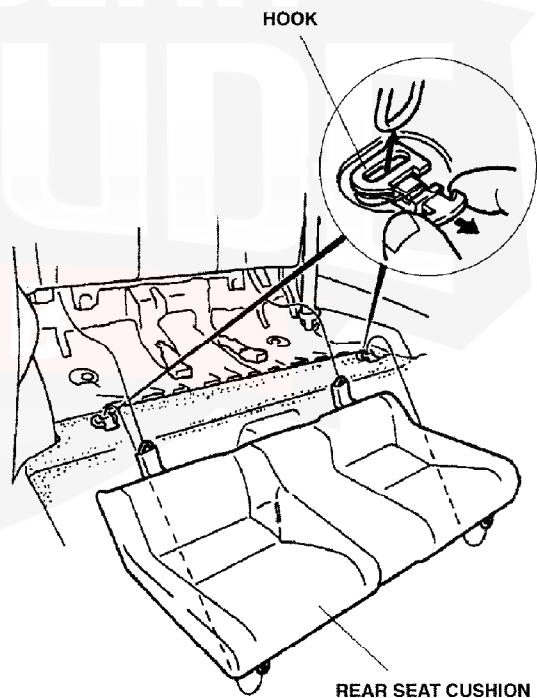


9. Fold down the rear seat-back, and remove the two clips and the two bolts. Remove the rear seat-back.

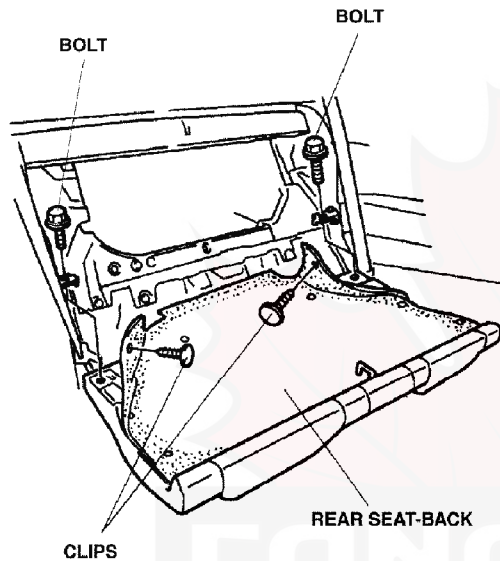


10. Remove the three clips securing the floor carpet. Route the bus cable toward the front under the floor carpet.

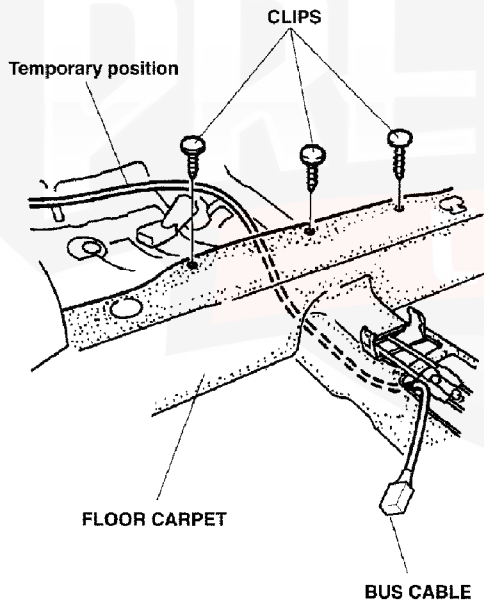

11. Route the bus cable under the floor carpet to the audio unit opening. Pull the bus cable out through the audio unit opening approximately 100 mm.

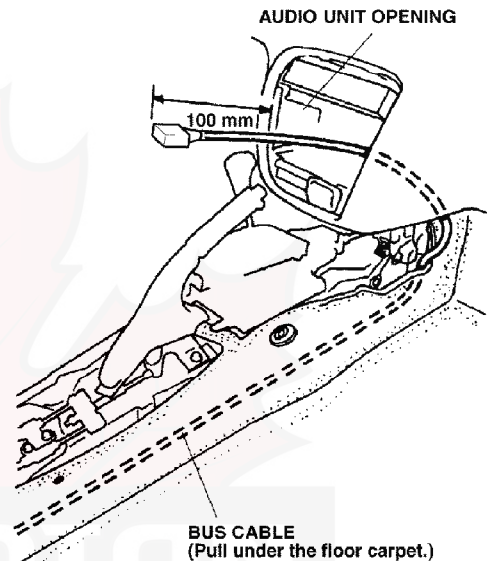


12. Under the carpet, secure the bus cable to the floor panel with two cushion tapes in the areas shown.

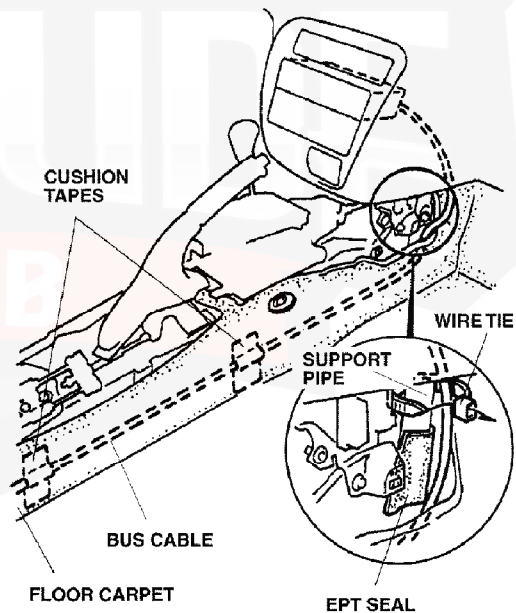


13. Wrap one EPT seal around the support pipe to protect the bus cable. Secure the bus cable to the support pipe with one wire tie in the area shown.


14. At the back seat area, route the bus cable toward the rear under the carpet in front of the rear seat. Secure the bus cable to the floor with two cushion tapes.

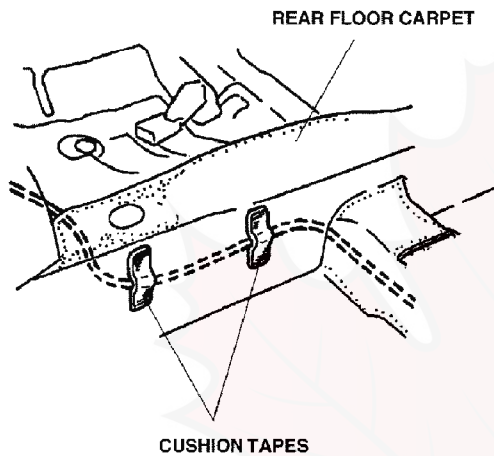


15. Remove the spare tire lid, then continue routing the bus cable along the floor and through the hole near the seat belt. Route the bus cable as shown, and not through the seat bracket hole.

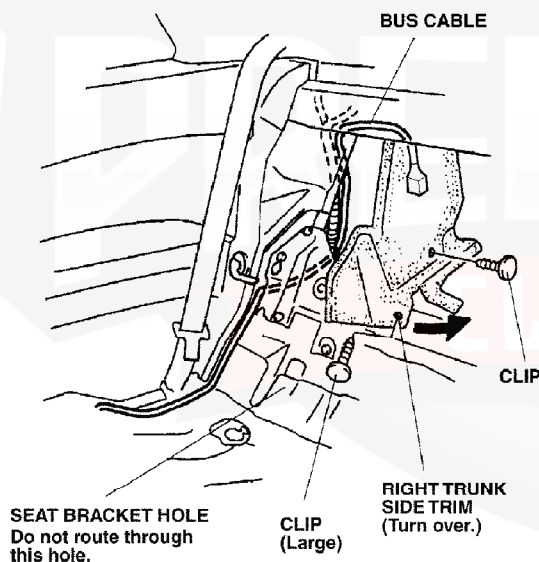

16. To prevent damage to the bus cable, attach a piece of EPT seal to the metal edge. Secure the bus cable to the floor with two cushion tapes.

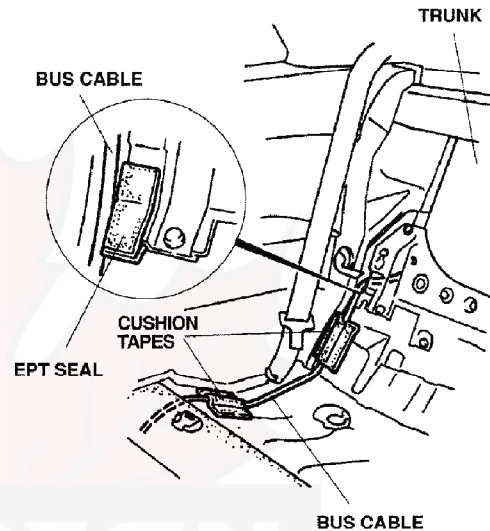


17. Inside the trunk, locate the three square holes in the rear shelf on the right side. Slide a spring nut over each of the three square holes in the direction shown.

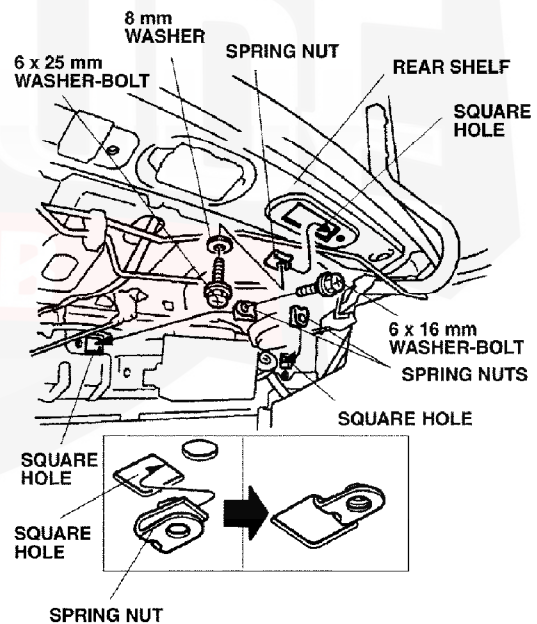


18. Loosely install one 6 x 16 mm washer-bolt and the 6 x 25 mm washer-bolt with the 8 mm washer into the spring nuts as shown.

Installing the CD Changer


19. Carefully unpack the CD changer. Remove the three shipping screws, and discard the shipping cover. Install an adhesive seal (included with the CD changer kit) over each of the three shipping screw holes. Save the shipping screws for your customer in the event the unit needs to be serviced.

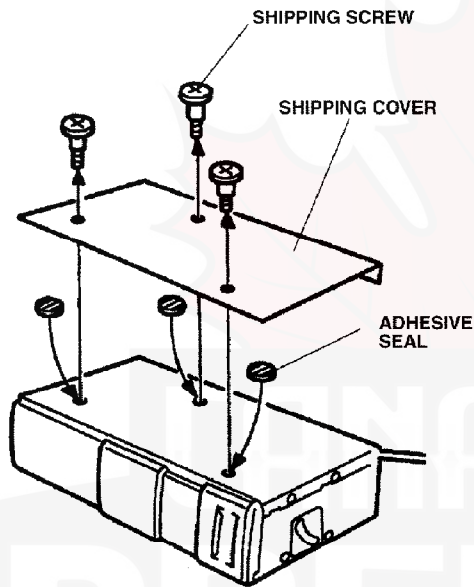


20. Visually check the position of the spring adjusting pin on both sides of the CD changer. If the spring adjusting pins are not in the horizontal (H) position, move the pins into the horizontal (H) position by sliding them down with an awl.

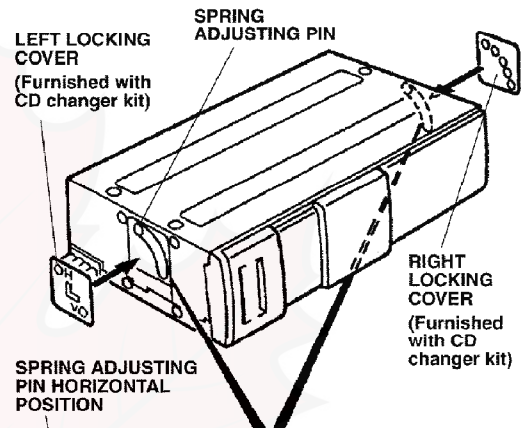


21. Remove the adhesive backing from the "L" and "R" locking covers, and attach them to the sides of the CD changer. Align the diagonally opposite holes with the H and V positions.
22. Install the left bracket and the right bracket onto the CD changer trunk unit using the four 4 x 8 mm washer-screws provided with the CD changer attachment kit.

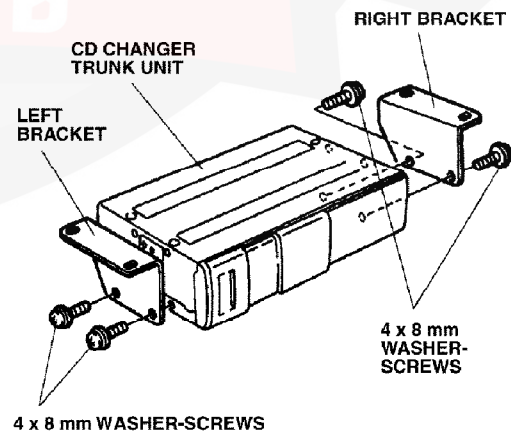

23. Position the CD changer trunk unit on the CD changer bracket, and install the four 6 mm nuts. Note the installation direction. Tighten the nuts securely.

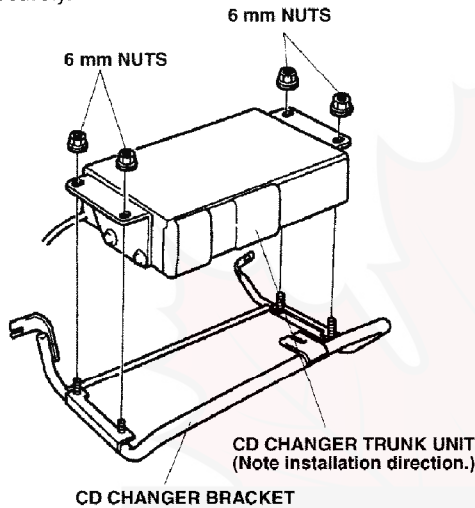


24. Slide the rear cutout end of the CD changer bracket under the head of the 6 x 16 mm washer-bolt you installed in step 18. Turn the entire bracket to slide the cutout in the middle of the bracket between the washer and the head of the 6 x 25 mm washer-bolt you installed in step 18.

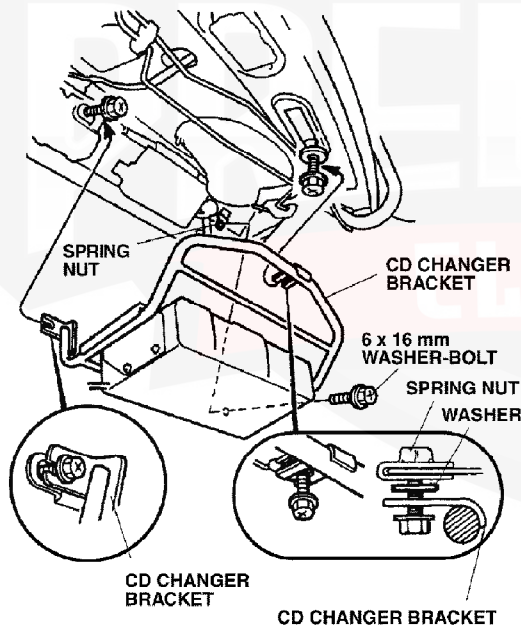


25. Install the remaining 6 x 16 mm washer-bolt through the forward cutout end of the CD changer bracket and into the spring nut. Tighten all three washer-bolts securely.

26. Connect the bus cable connector to the connector from the CD changer trunk unit, and wrap the connectors with one cushion tape.

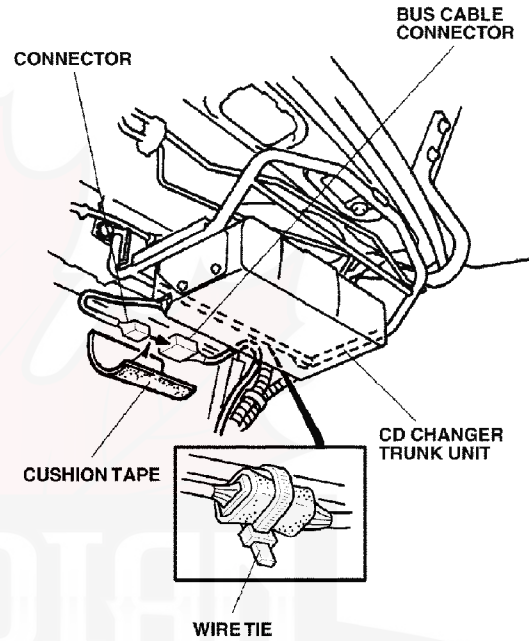

27. Secure the connectors to the CD changer bracket with one wire tie over the cushion tape.

28. Inside the trunk, bundle up the excess bus cable, and secure it to the vehicle harness with three additional wire ties in the areas shown.

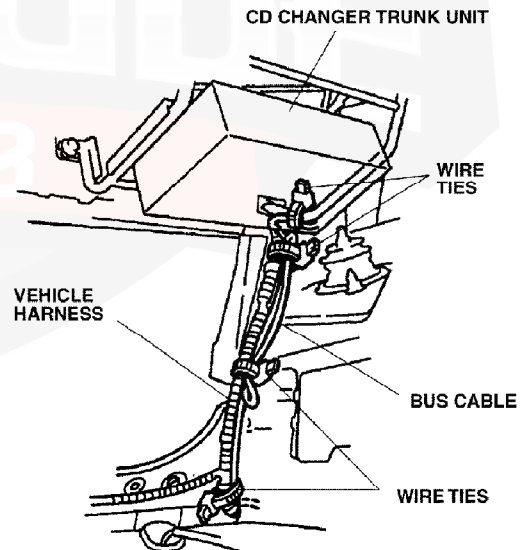


29. Secure the bus cable near the floor with one wire tie.


Connecting the Bus Cable to the Audio Unit

30. Plug the bus cable, the 16-pin connector, and the antenna lead into the rear of the audio unit, then reinstall the audio unit. Take care not to pinch the wire harnesses or the bus cable.

Standard Audio System

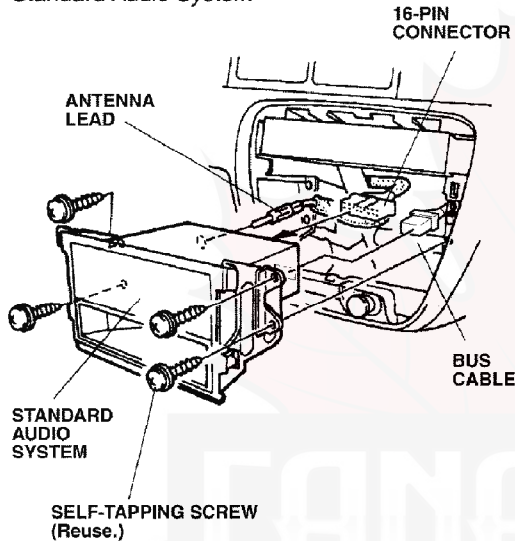

Audio System with Cassette Player

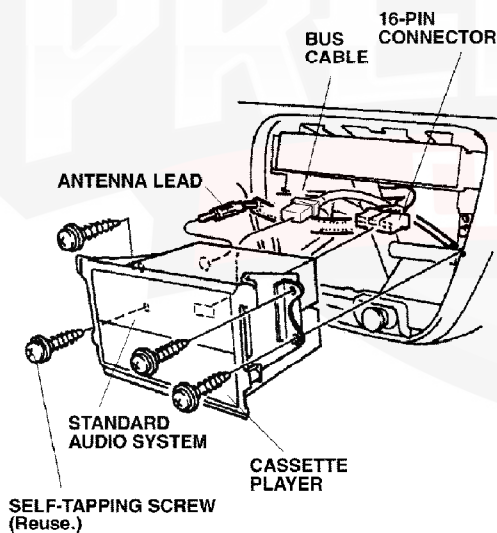

31. Check that all wire harnesses are routed properly and all connectors are plugged in.
32. Reconnect the negative cable to the battery.
33. Reinstall all removed parts.
34. Enter the customer's radio anti-theft code, and reset the radio station presets.
35. Reset the clock.
36. Check the operation of the CD changer according to its Owner's Manual.
37. Put the Owner's Manual and the shipping screws that you saved in step 19 in the glove box.