 HONDA INSTALLATION INSTRUCTIONS	Accessory	Application	Publications No.
	IN-DASH CD CHANGER	2000 PRELUDE	All 21011
			Issue Date MARCH 2000

PARTS LIST

In-Dash CD Changer Attachment:
P/N 08B06-S30-100

Right bracket




Left bracket



In-Dash CD Changer: P/N 08A06-3B1-300

In-Dash CD changer

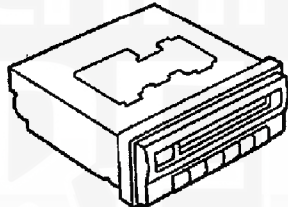

Owner's Manual




6 Washer-screws
(5 x 8 mm)



Washer-screw
(4 x 6 mm)




Wire tie (Not used)

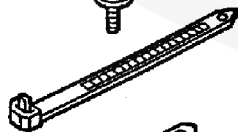

Harness clip



Adhesive strip

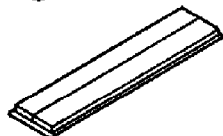


TOOLS AND SUPPLIES REQUIRED


Phillips screwdriver
Flat-tip screwdriver
Shop towel
Utility knife
Contact cleaner
Gloves

INSTALLATION


1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.
3. Apply the parking brake, and move the shift lever to first gear (A/T only). Using a shop towel around a screwdriver, release the eight clips securing the center panel, and remove it. Take care not to damage the clips.

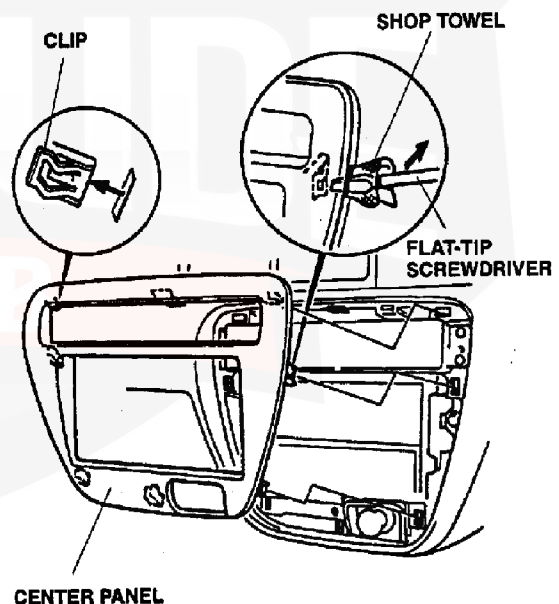


4. Remove the radio by removing the four self-tapping screws, disconnecting the 20-pin connector, and the unplugging antenna lead.

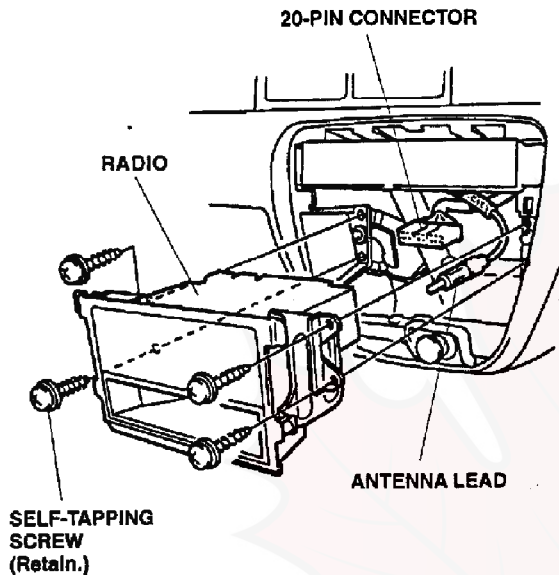


5. Remove and retain the four screws that fasten the radio to the front bracket, and separate the radio from the radio bracket.

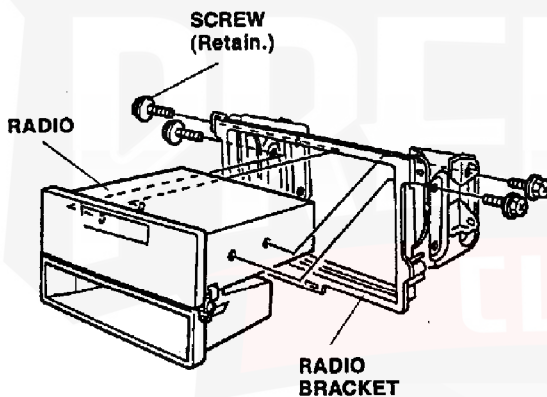


6. Remove the pocket from the radio (two screws).

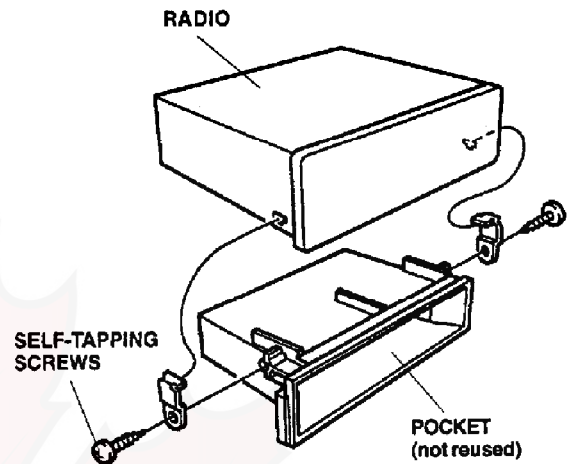


7. Remove the right and left brackets from the radio bracket by removing the two self-tapping screws from each side bracket.

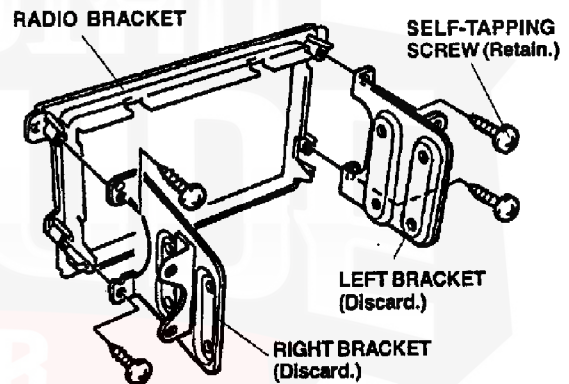


8. Using a utility knife, cut out the marked areas from the radio bracket.

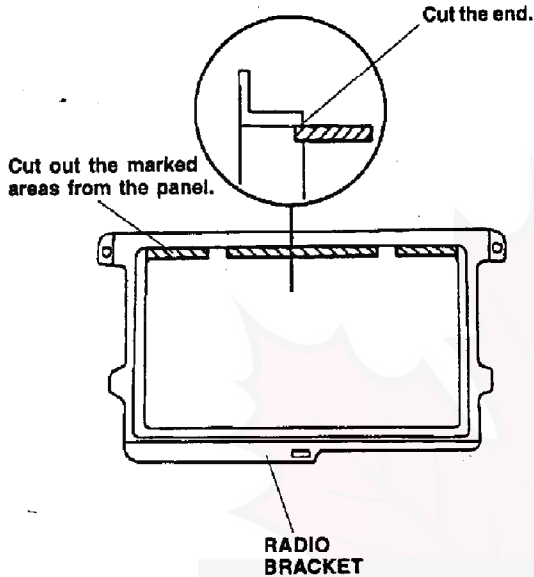

9. Position the new right and left brackets on the radio bracket, and install the four self-tapping screws you removed in step 7.

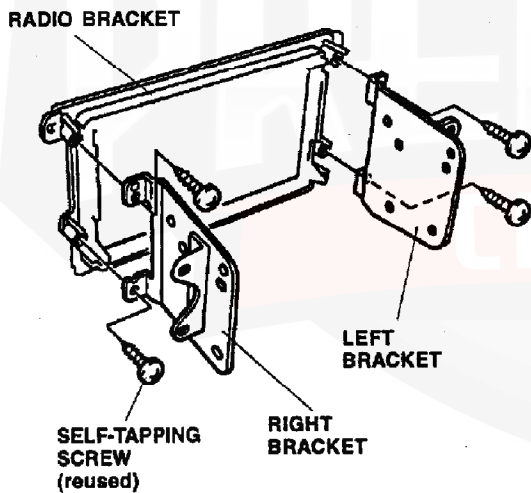


10. Unpack the in-dash CD changer. While wearing gloves, remove the shipping cover and label. Discard the shipping cover and label.

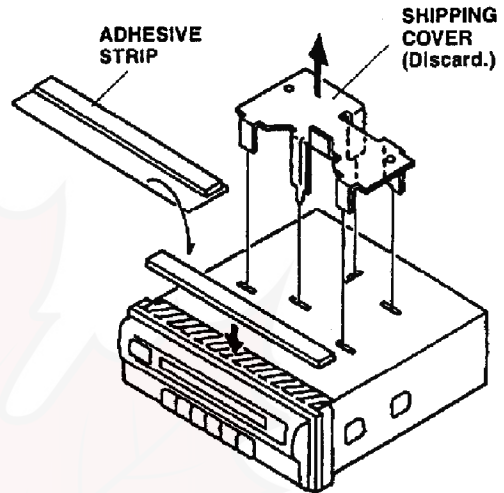


11. Attach one adhesive strip to the top of the in-dash CD changer in the area shown. Discard the remaining adhesive strip; it is not used.


12. Place the in-dash CD changer on top of the radio, and slide the assembly into the radio bracket. Install the four screws you removed in step 5 and four 5 x 8 mm washer-screws supplied with the in-dash CD changer.

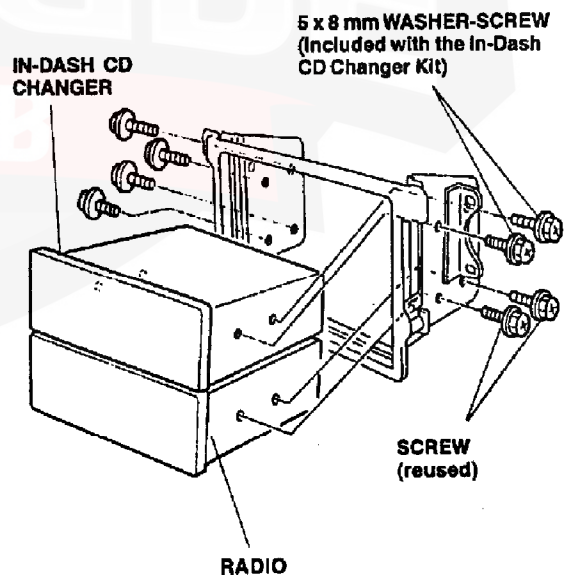


13. Install the harness clip to the rear of the in-dash CD changer using the 4 x 6 mm washer-screw.

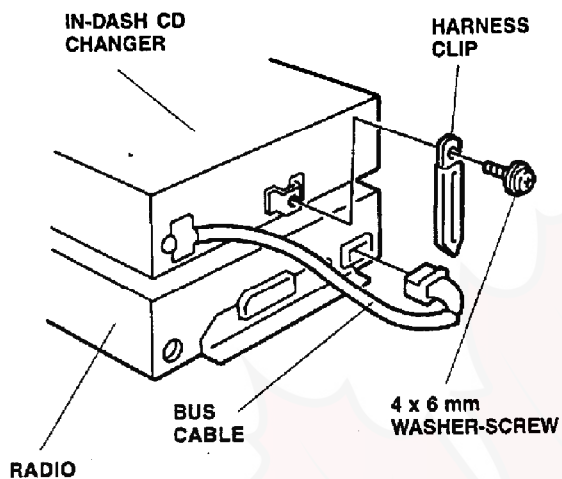

14. Plug the connector from the in-dash CD changer into the rear of the radio; then fold and secure the BUS cable with the harness clip.

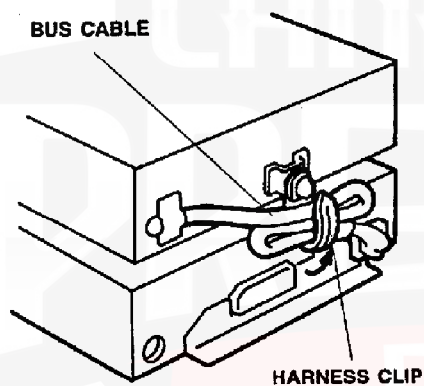

15. Plug the vehicle harness 20-pin connector and the antenna lead into the rear of the radio.

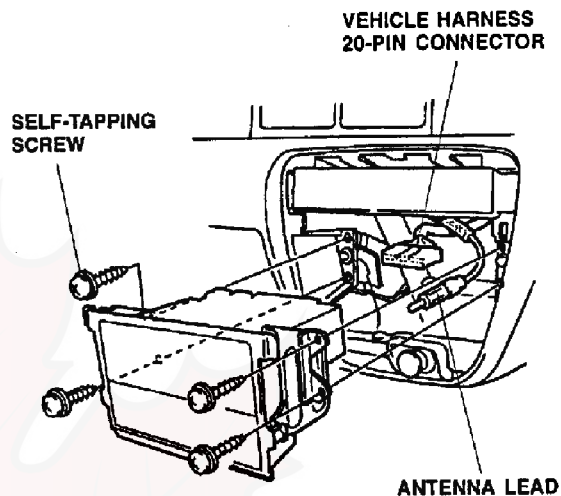

16. Install the radio assembly into the instrument panel using the four self-tapping screws you removed in step 4. Take care not to pinch the wire harnesses.
17. Reinstall the center panel.
18. Check that all wire harnesses are routed properly and all connectors are plugged in.
19. Reconnect the negative cable to the battery.
20. Enter the customer's radio anti-theft code, and reset the radio station presets.
21. Reset the clock.
22. Check operation of the in-dash CD changer according to the Owner's Manual supplied.