



H HONDA INSTALLATION INSTRUCTIONS	Accessory	Application	Publications No.
	GOLD EMBLEM KIT P/N 08F20-S30-100	2000 PRELUDE	All 21008
			Issue Date
			SEP 1999

PARTS LIST

Front gold "H" emblem

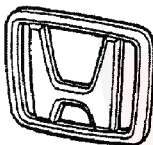

Rear gold "H" emblem

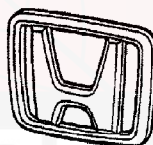

TOOLS AND SUPPLIES REQUIRED

Flat-tip screwdriver

Isopropyl alcohol

Shop towel

INSTALLATION


NOTE:

This emblem kit should be installed only when the ambient air temperature is 60°F (15°C) or above.

Be careful not to damage the body finish when you remove and install the emblems.

To allow the adhesive to cure, do not wash the vehicle for 24 hours.

1. Using a shop towel around a screwdriver, gently pry on the rear "H" emblem to remove it.

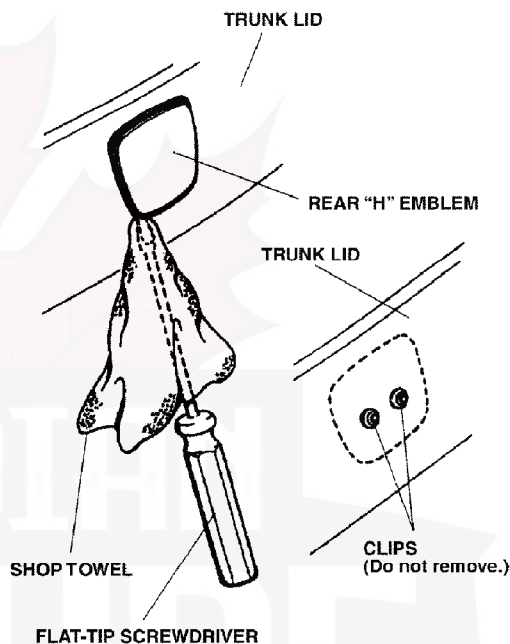

2. Using isopropyl alcohol on a shop towel, clean the area where the emblem was removed.
3. Remove the adhesive backing from the rear gold "H" emblem, and attach it to the vehicle by aligning the locating pins with the holes.
4. Repeat steps 1 through 3 to install the front emblem.